


Thank you for purchasing our equipment. Please read this manual carefully and heed the safety warnings and instructions before installing, using or repairing the equipment. This will ensure not only the protection of persons, but also the long life of the equipment.

## SAFETY NOTICE

Read the following instructions and warnings before use.

- The appliance must be installed so that the switches and other controls cannot be reached by persons using the bath or shower.
- This device is supplied with a Y-connector. Replacement/repair of the supply cable must only be carried out by the manufacturer's service centre.
- The device must not be placed directly under the socket.
- Do not use the device in rooms smaller than 4m<sup>2</sup>.
- The appliance is equipped with a safety device that switches off the appliance in case of accidental overheating (e.g. clogging of the air intake and exhaust grille, slow or no motor rotation). To reset, disconnect the plug from the power supply for a few minutes, remove the cause of overheating and then reconnect the appliance. If the appliance still does not work, reclaim it.
- Connect the device only to a single-phase socket with the voltage specified on the type plate.
- This appliance complies with the electromagnetic compatibility requirements of EN 55104/95.
- Do not leave the home when the appliance is in use: make sure the switch is in the OFF (0) position and the thermostat in the lowest position. Always unplug the appliance when not in use.
- Keep flammable material such as furniture, cushions, bedding, paper, clothing, curtains etc. at least 1m away from the appliance on all sides.
- Do not hang or overlap anything on the device.
- Do not leave the device unattended, especially when children and pets are around.
- Do not use the fan heater in the immediate vicinity of a bath, shower or swimming pool.
- Do not use fan-assisted equipment in rooms with explosive gases or when using flammable solvents, varnishes or adhesives.
- Keep the fan heater clean. Do not allow any objects to enter the vent or exhaust as this could cause electric shock, fire or damage to the heater.
- When not in use, store the device in a cool, dry place out of direct sunlight.
- Always use the device in an upright position.
- Do not use outdoors. This product is intended for household use only.
- It is normal for the device to emit odours and fumes when the device is first switched on or when switched on after it has not been used for a long time. This smell will disappear after a while of use.

## CONTROL

- Turn the thermostat knob (left) clockwise until it reaches the maximum setting.
- Fan only: turn the switch (right) to .
- Medium power heating: turn the switch (right) to position I (2000 W).
- Full power heating: turn the switch (right) to position II (3000 W).
- To switch off: turn the switch (right) to 0.

## THERMOSTAT CONTROL

- When the desired room temperature is reached, turn the left thermostat knob slowly counterclockwise until the unit shuts off. The temperature thus set will be automatically regulated and maintained at a constant level by the thermostat.

## CLEANING AND MAINTENANCE

- Always switch off the appliance and unplug it from the socket before cleaning.
- Clean the air inlet/outlet grilles frequently.
- Never use abrasive powders or solvents.
- If the appliance is used in a portable design, do not place it against walls, furniture, curtains, etc.

## TECHNICAL PARAMETERS

- Power: 25/2000/3000W
- Protection: IP20
- Supply: AC220 – 240V, 50/60Hz

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations. On request from the manufacturer: [info@solight.cz](mailto:info@solight.cz), or downloadable from [www.solight.cz/en](http://www.solight.cz/en).

